

# 2-WAY DIRECT ACTING WATER REGULATING VALVE FOR HIGH PRESSURE REFRIGERANTS


## **S**ELECTION CRITERIA

- Fresh water use
- Direct acting
- R-410a service
- Open on pressure increase
- Optional open on pressure decrease
- Flanged end connections
- 2-Way configuration
- 2" & 2-1/2" sizes
- 150 PSI water pressure rating
- 650 PSI refrigerant pressure rating

PAGE 1 OF 3

### **C**ONSTRUCTION DETAILS

- Brass & Stainless Steel internals
- Buna-N diaphragms & seals
- Body material: See Table II
- Flange: See Table II

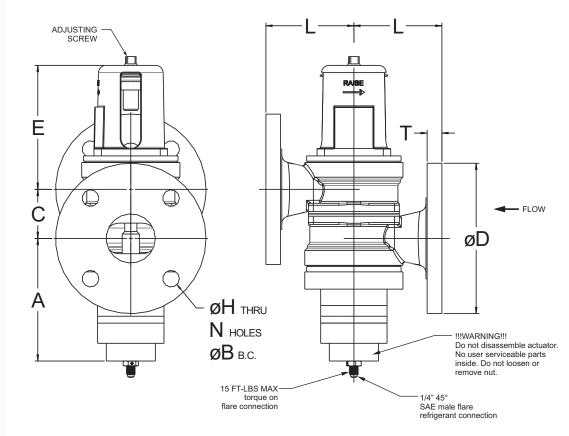

## VALVE SIZING CHART.

VALVE PART	VALVE SIZE	Cv	VALVE DIMENSIONS				
NUMBER			A ±.13	C ±.06	E ±.13	L ±.06	
965P-200FL2W	2"	26	6.00	1.94	5.91	3.63	
965P-250FL2W	2-1/2"	38	6.25	2.50	6.32	4.13	

All dimensions are in inches

METREX VALVE CORP. ENGINEERED CONTROL SOLUTIONS FOR HVAC 

REFRIGERATION 
MARINE 
NUCLEAR
505 S. Vermont Ave., Glendora, CA 91741, USA (800) 266-4027 Fax: (626) 335-1514 www.metrexvalve.com
Data subject to change without notice.




# 2-WAY DIRECT ACTING WATER REGULATING VALVE FOR HIGH PRESSURE REFRIGERANTS

PAGE 2 OF 3

#### **O**RDERING INFORMATION .

 Use the valve sizing chart on the preceding page, tables, and charts below to determine the complete part number.

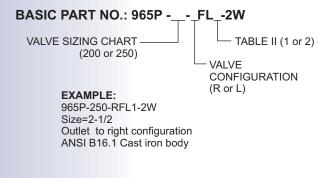


#### **P**RESSURE RANGE ADJUSTMENT


 The refrigerant pressure range at which the valve begins to open can be adjusted from approximately 100 to 340 PSIG. An increase in refrigerant pressure of approximately 65-70 PSIG is required to fully open the valve.

TABLE II												
ASSEMBLY NUMBER MATERIAL		FLANGE	DESIGN	PROOF	FLANGE DIMENSIONS							
	SPECIFICATION	PRESS.	PRESS.	Ν	Н	В	D	Т				
-200FL1-	CAST IRON	ANSI B16.1 CLASS 125 LB.	150 PSI	225 PSI	4	0.75"	4.75"	6.00"	0.62"			
-200FL2-	BRONZE	ANSI B16.24 CLASS 150 LB.	150 PSI	225 PSI	4	0.75"	4.75"	6.00"	0.50"			
-250FL1-	CAST IRON	ANSI B16.1 CLASS 125 LB.	150 PSI	225 PSI	4	0.75"	5.50"	7.00"	0.69"			
-250FL2-	BRONZE	ANSI B16.24 CLASS 150 LB.	150 PSI	225 PSI	4	0.75"	5.50"	7.00"	0.56"			

### VALVE CONFIGURATION .

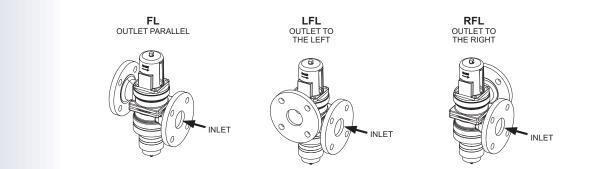

METREX VALVE CORP. ENGINEERED CONTROL SOLUTIONS FOR HVAC • REFRIGERATION • MARINE • NUCLEAR 505 S. Vermont Ave., Glendora, CA 91741, USA (800) 266-4027 Fax: (626) 335-1514 www.metrexvalve.com

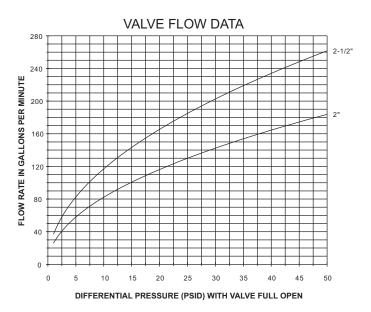




## **965P-FL-2W** 2-WAY DIRECT ACTING WATER REGULATING VALVE FOR HIGH PRESSURE REFRIGERANTS

### **2**-WAY HEAD PRESSURE REGULATOR TYPICAL APPLICATION \_\_\_\_

PAGE 3 OF 3

 Typically used to modulate the cooling water through a condenser in response to a pressure signal from the condenser. Refrigerant head pressure is maintained over a wide range of operating conditions for a maximum system operating efficiency.



#### INSTALLATION INSTRUCTIONS

- 1) Valves can be mounted in any position without affecting performance. However, for ease of adjustment consider the accessibility of the adjusting screw.
- 2) Connect the incoming water line to the valve inlet. Direction of water flow is indicated by the arrow cast on the side of the valve body.
- 3) Connect refrigerant connection capillary to refrigerant pressure connection on the condenser.
- 4) See Metrex datasheet 50M-366 for available capillary assemblies for connecting the valve.
- 5) Do not disassemble actuator. There are no user serviceable parts inside the actuator.

## GENERAL DESCRIPTION

The 965 series valves are direct acting, modulating water regulating valves utilizing a diaphragm construction to give smooth, well balanced action. The pressure-balanced design and low frictional coefficient of the diaphragms assure fast response to changes in refrigerant pressure and protection against both gradual and sudden water pressure changes. All sliding parts and adjustment springs are isolated from the water flow by the leak proof diaphragms. The actuator is designed for use with R-410a and is rated at a full 650 PSIG.

## Adjustment

 All valves in 2" and 2-1/2" sizes are suitable for R-410a service. The refrigerant pressure at which the valve begins to open can be adjusted between 100 and 340. A 65-70 PSI increase of refrigerant pressure is required to fully open the valve.

To adjust condensing head pressure, use the adjusting screw on top of the spring housing. Turn counter clockwise to raise the opening point (raise head pressure). Turn clockwise to lower the opening point (lower head pressure).

## MANUAL OVERRIDE

 All valves may be manually flushed by inserting a screwdriver in openings at opposite sides of the spring housing and lifting the lower spring plate to open the valve. The valve adjustment is not affected by manual flushing.

