

# M900P-SE-3W

#### 3-WAY DIRECT ACTING WATER REGULATING VALVE

# SELECTION CRITERIA

PAGE 1 OF 3


- Marine water use
- Direct acting
- Actuation by pressure
- 150 PSI water pressure rating

- Screwed end connections NPT
- 3-Way configuration
- 3/8" thru 1-1/2" sizes
- 225 PSI proof pressure

#### CONSTRUCTION DETAILS \_

- Monel internals
- Buna-N diaphragms & seals

Bronze body per ASTM B61

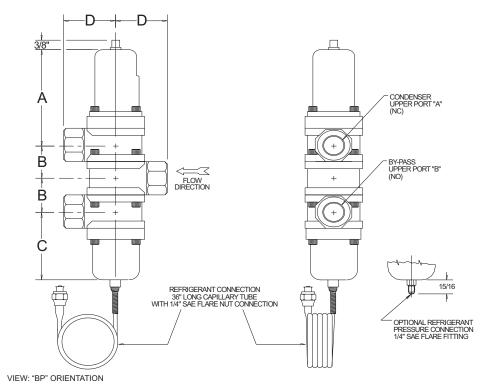

Reference Metrex drawing 900P-SE-3W

\*NOTE: Normally closed (NC) ports open on pressure increase, normally open (NO) ports close on pressure increase.

# VALVE SIZING CHART—

VALVE PART NUMBER	PIPE SIZE	C <sub>V</sub>	DIMENSIONS				APPROX.
			Α	В	С	D	SHIP WT.
M900P-37SE-3W	3/8"	1.5	3-15/32"	1-1/32"	2-5/32"	1-23/64"	5#
M900P-50SE-3W	1/2"	3.8	3-3/4"	1-3/16"	2-47/64"	1-9/16"	7#
M900P-75SE-3W	3/4"	6.3	3-7/8"	1-21/64"	2-27/32"	1-3/4"	10#
M900P-100SE-3W	1"	11	6-1/8"	1-3/4"	3-11/16"	2-3/8"	15#
M900P-125SE-3W	1-1/4"	14.5	6-19/32"	2-1/32"	4-5/32"	2-5/8"	17#
M900P-150SE-3W	1-1/2"	17	6-19/32"	2-7/32"	4-5/32"	2-3/4"	20#



# M900P-SE-3W

3-WAY DIRECT ACTING WATER REGULATING VALVE

#### **O**RDERING INFORMATION \_

PAGE 2 OF 3

 Use the valve sizing chart on the preceding page tables and charts below to determine the complete part number.

BASIC PART NO.: M900P - - SE-3W BELLOWS OPTIONS: VALVE SIZING CHART **VALVE CONFIGURATION** 

## PRESSURE RANGE ADJUSTMENT\_

The refrigerant pressure at which port A (normally closed) begins to open can be adjusted from 50 to 225 PSI. A 45 PSI increase of pressure is required to open port A fully.


#### **B**ELLOWS OPTIONS \_

The optional 1/4" male SAE flare fitting for refrigerant pressure connection is designated by an "F" after the P. The 1/4" SAE flare fitting replaces the 36" long capillary tube with 1/4" SAE flare nut connection.

Example: M900PF-100SE-3W.


The optional ammonia is designated by an "A" after the P.

Example: M900PA-150SE-3W.

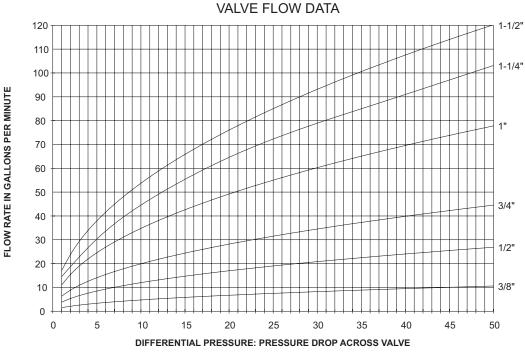

# VALVE CONFIGURATION

NOTE: The "BP" port orientation is standard, does not need to be specified and is shown on the preceding page.



LR LOWER PORT TO THE RIGHT В  $\Rightarrow$ 分

UPPER PORT TO THE LEFT В 分

UL

TO THE RIGHT В IN

仚

UR

UPPER PORT

LL/UR LOWER PORT LEFT/ UPPER PORT RIGHT

LOWER PORT RIGHT/ UPPER PORT LEFT

LR/UL






# M900P-SE-3W

3-WAY DIRECT ACTING WATER REGULATING VALVE

# 3-WAY HEAD PRESSURE REGULATOR TYPICAL APPLICATION \_\_\_\_\_

PAGE 3 OF 3

 Typically used to modulate the cooling water through a condenser in response to a pressure signal from the condenser. Refrigerant head pressure is maintained over a wide range of operating conditions for a maximum system operating efficiency.

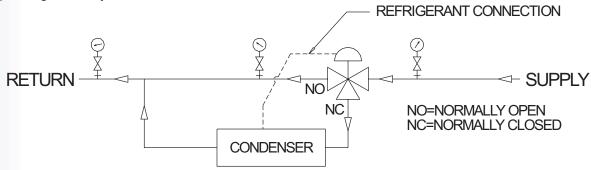

### INSTALLATION INSTRUCTIONS \_

- 1) Valves can be mounted in any position without affecting performance. However, for ease of adjustment consider the accessibility of the adjusting screw.
- 2) Connect the incoming water line to the valve inlet. Direction of water flow (see drawing) is indicated by the arrow cast on the side of the valve body.
- 3) Connect capillary tube (1/4" flare nut) to refrigerant head pressure connection on condenser.

## GENERAL DESCRIPTION \_\_\_\_

 The M900 series valves are direct acting, modulating water regulating valves utilizing a diaphragm construction to give a smooth, well balanced action. The pressure-balanced design and low frictional co-efficient of the diaphragm assure fast response to changes in refrigerant pressure and protection against both gradual and sudden water pressure changes. All sliding parts and adjustment springs are isolated from the water flow by the leak proof diaphragms.

### Adjustment \_\_\_\_\_

All valves 3/8" thru 1-1/2" sizes are multi-range valves applicable to both R-12 and R-22 service. The refrigerant pressure at which the valve begins to open can be adjusted from 50-225 PSI. A 45 PSI increase of pressure is required to open the valve fully.

To adjust condensing head pressure, use the adjusting screw on top of the spring housing. Turn counter clockwise to raise the opening point (raise head pressure). Turn clockwise to lower the opening point (lower head pressure).

## MANUAL OVERRIDE \_\_\_\_\_

 All valves may be manually flushed by inserting a screwdriver in openings at opposite sides of the spring housing and lifting the lower spring plate to open the valve. The valve adjustment is not affected by manual flushing.

